

1 Assemble the main frame components (A, B, C) and attach the mounting brackets (J, K, L).
 Schroeven voor scherm niet inbegrepen
 Screws for screen not included

2 Place the main frame inside the cabinet (F).
 CABINET
 Screws for cabinet not included
 Schroeven voor kast niet inbegrepen

3 Connect all cables (N, O, P) to the control unit (F).
 Connect all cables
 Sluit alle kabels aan

4 Attach the top rail (D) and the screen (E) to the main frame.
 TOP
 SCREEN
 Schroeven voor scherm niet inbegrepen
 Screws for screen not included

5 Adjust the screen height. The distance between the 2.5 cm and 3.5 cm marks should be correct.
 Afstand tussen 2,5 en 3,5 cm
 Distance between 2,5 and 3,5 cm
 Stel het scherm op de juiste hoogte in
 Adjust screen to the right height

6 Press the lowest position button (G) for 6 seconds to reset the lift.
 Reset de lift door de laagste stand te drukken gedurende 6 seconden
 Reset the lift by pressing the lowest position for 6 seconds

7 Move the screen to the highest position using the control unit (G).
 Verplaats scherm naar hoogste positie
 Move screen to highest position

8 Adjust the screen height to 2 cm from the top rail (I, H, K).
 2 cm

9 Final assembly view showing the TV lift inside the cabinet.

Technical Drawing:
 Hole diameter: $\varnothing 15\text{ MM}$
 Dimensions: 35, 14,8, 9,4, 15, 35,3, 2,8